



Story Creator


Quick-Start Guide



See it in action!

Scan the QR code to watch a quick start demo. Or follow the simple steps below.

Or visit: crayola.com/storycreator

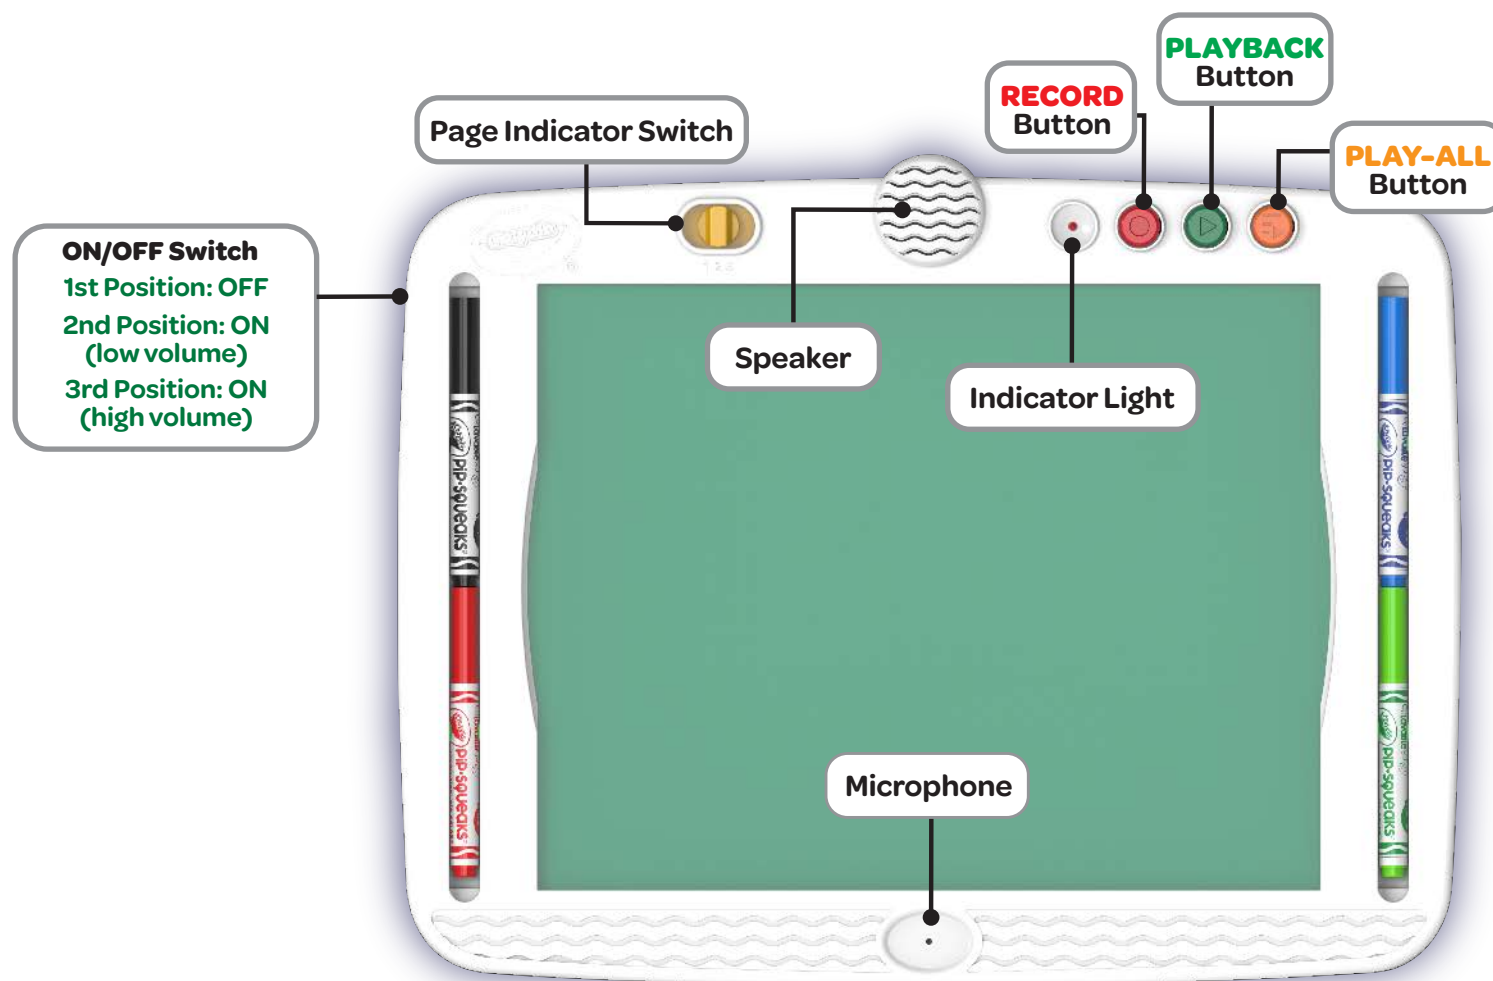


ON/OFF Switch
1st Position: OFF
2nd Position: ON (low volume)
3rd Position: ON (high volume)




1 Draw Your Story

Place a sheet of paper on the drawing surface. Draw anything you want using your favorite Crayola markers, crayons, or colored pencils.

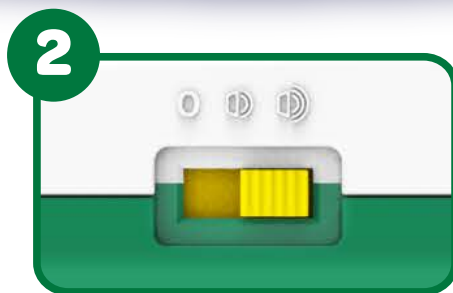


2 Turn It On

Slide the ON/OFF switch to the ON position. The Indicator Light will flash orange.

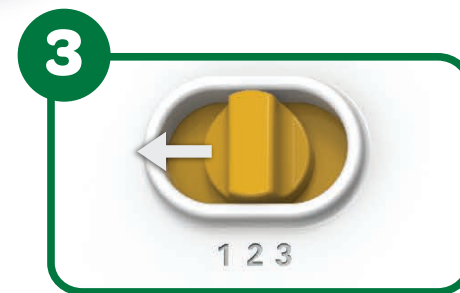

3 Pick Your Page

Slide the Page Indicator Switch to 1. This tells the Story Creator which page you're working on. You can record up to 3 pages.

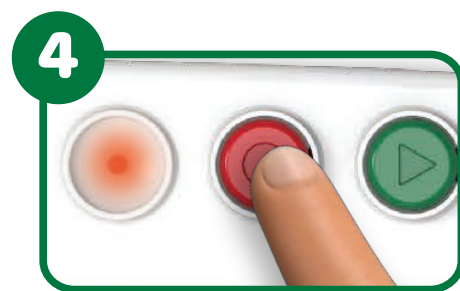

4 Record Your Voice

1. Press the **Red RECORD button**. The light turns red to show you are in record mode. **Recording will not start until you press and hold a spot and hear a beep.**



2. Press firmly and continually hold your finger on the spot of your drawing where you want to record. Speak clearly into the microphone while **pressing that spot until you are finished.**

Note: Keep constant pressure on the spot or the recording will stop.

3. When done, lift your finger. The recording saves to that spot.

4. Repeat this process for each spot you wish to record.

Pro Tip: Recording may take practice; refer to full instruction sheet for more information and how to erase/re-do recordings.

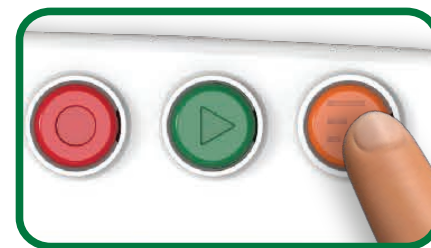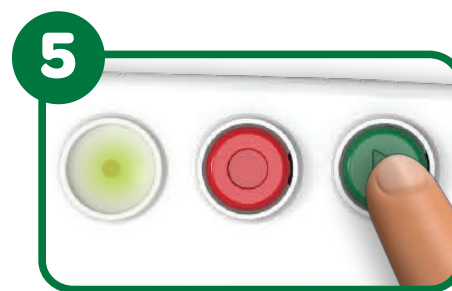

5 Hear Your Story Two Ways

1. Play back individual spots: Press the **Green PLAYBACK button** to go into playback mode. The light will turn green. Then press the same area on your drawing to hear the recording in that spot.

2. Hear full story: Press the **Orange PLAY-ALL button** to hear ALL recordings on the page in the order you recorded them.

That's it! You just made your first Story Creator page.

For more Story Creator functions like erasing a page and re-recording, see the full instruction sheet.