




Musical Colour Bug

CONTENTS

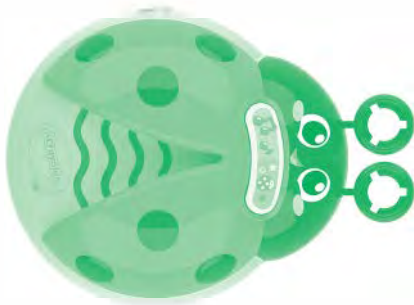

Musical Colour Bug



8 Washable Markers



25ft (7.6m) Paper Roll

BATTERY INSTALLATION

Requirements: 3 AAA batteries (not included), Phillips-head screwdriver (not included).

Caution: Batteries must be installed by an adult.

1. Use Phillips-head screwdriver to loosen battery cover screw on bottom of unit. Remove any used batteries and dispose properly.
2. Insert three (3) AAA batteries. Ensure direction matches diagram inside battery case.
3. Replace battery cover and tighten screw.

Get Started



Hold antenna rings to insert markers.
Push until you hear an audible click.



Slide switch to desired volume
setting to power on.

Music Mode

1.



Press the green music note button to activate Music Mode. Music will play when you colour! Music stops when colouring stops.

2.



Hear a different song each time you press — 6 unique songs total!

Colour Bug Mode

1.



Press the orange ladybug button to activate Colour Bug Mode.

2.



Try different colouring motions to discover the correlating sound effects!

Clean Up

Turn switch to “OFF” (O) position when not in use.
Remove markers from unit and cap securely.
Wipe any marks from unintended surfaces clean with a damp cloth or paper towel.
DO NOT IMMERSE UNIT IN WATER.

Style#: 81-1545 Code#: 81-1545-U-100 [crayola.com](https://www.crayola.com)

CAUTION: BATTERIES MUST BE INSTALLED BY AN ADULT ONLY.
We recommend using non-rechargeable batteries.

NO BATTERIES INCLUDED

The Wheelie Bin symbol indicates that the product and the batteries must not be disposed of with other household waste as they may contain elements which can have a harmful effect on the environment and human health. Please use designated collection points or recycling facilities when disposing of the item and the batteries. To help locate your nearest facility see: www.recyclenow.com



WASHING & CARE

FOR BEST RESULTS: Crayola Washable Markers wash from skin and most washable clothing. Wash promptly in hot wash cycle. Do not use prewash or chlorine bleach. Repeat laundering may be required.
STAIN ADVISEMENT: Keep away from wallpaper, painted walls, finished and unfinished wood, vinyl, carpeting and other materials that cannot be laundered.

QUALITY GUARANTEE: We guarantee the quality of all Crayola products. If this product does not perform properly, please contact us.

U.S.A. & CANADA (Call/Text)
1-800-CRAYOLA (800-272-9652)
M-F, 9 AM-4 PM ET
Text charges may apply.

AUSTRALIA
1-800-657-353
M-F, 9 AM-4 PM
AEST

UK
0800 389 6236
M-F, 9 AM-5 PM
local time

ITALY
+39 (0) 543 720997
M-F, 9 AM-5 PM
local time

MEXICO
800 7178 222
M-F, 9 AM-5 PM
local time

BENELUX
+31 (0)38 444 3093
M-F, 9 AM-5 PM
local time

FRANCE
+33 (0)1 41 06 54 54
M-F, 9 AM-5 PM
local time

GERMANY
+49 6103 459180
M-F, 9 AM-5 PM
local time

Crayola A **Hallmark** Company ©2024 Crayola, Easton, PA 18044-0431.
Serpentine Design®
Binney & Smith (Europe) Ltd., Bedford Heights, Manton Lane, Bedford, MK41 7PH, England; Binney & Smith (Europe) Ltd., Via Figline 13, 47122 Forlì (FC), Italy. Distributed in Australia by Crayola (Australia) Pty Ltd, 10 Caribbean Drive Scoresby Victoria 3179.